

ACU-RITE®

200S

Step-by-Step Instructions for Changing the Resolution Factor

ACU-RITE® 200S: *Changing Resolution Factor*




Inspect the reader head ID sticker on your scales.
Locate and **record** the resolution factor on **each** scale.
Each axis may be different —1 μm, 2 μm, 5 μm, 10 μm, etc.
In this case its 1μm.

ACU-RITE® 200S: *Changing Resolution Factor*




Start with the unit off.
Or turn it off and wait 10 seconds before you turn it back on.

ACU-RITE[®] 200S: *Changing Resolution Factor*

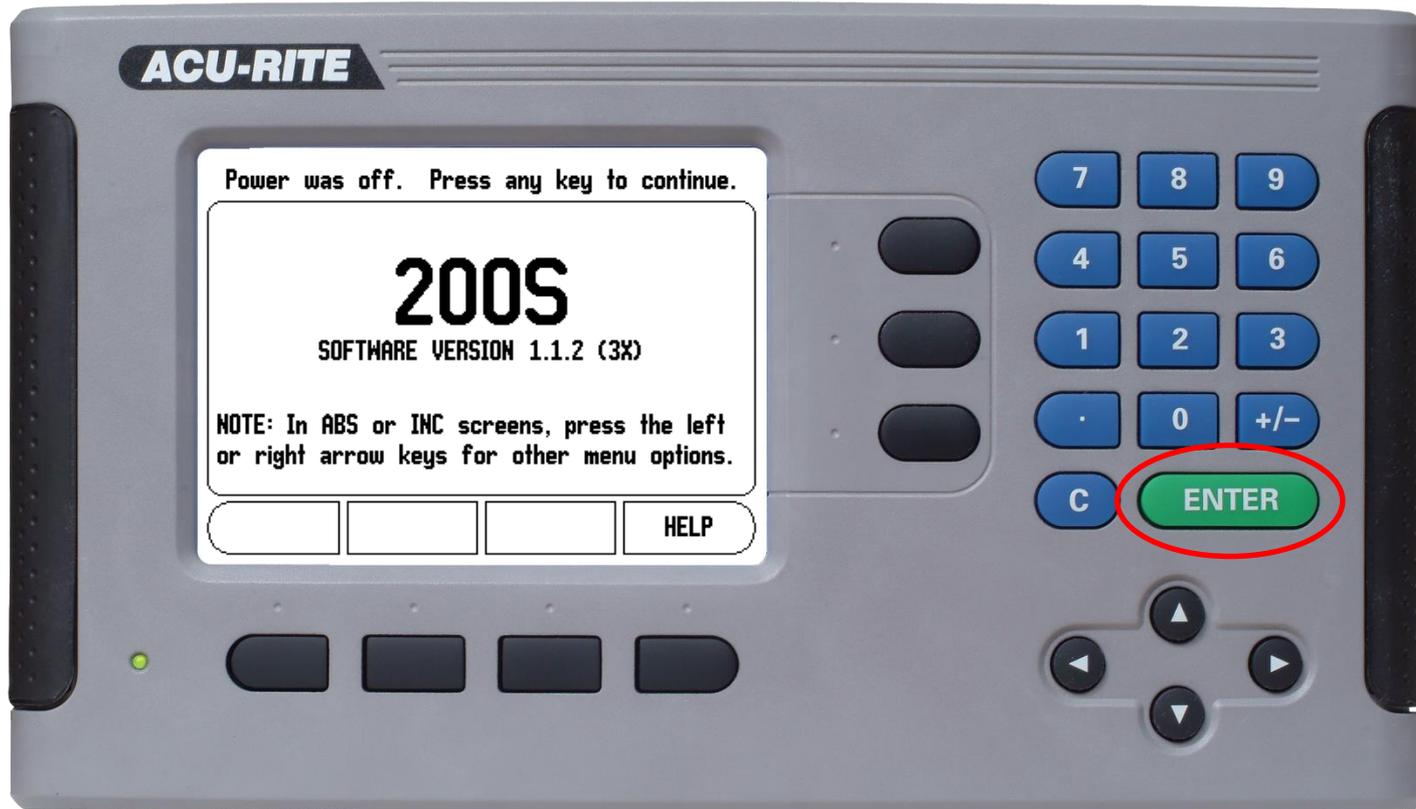


From the home screen, press the  key.

ACU-RITE[®] 200S: *Changing Resolution Factor*

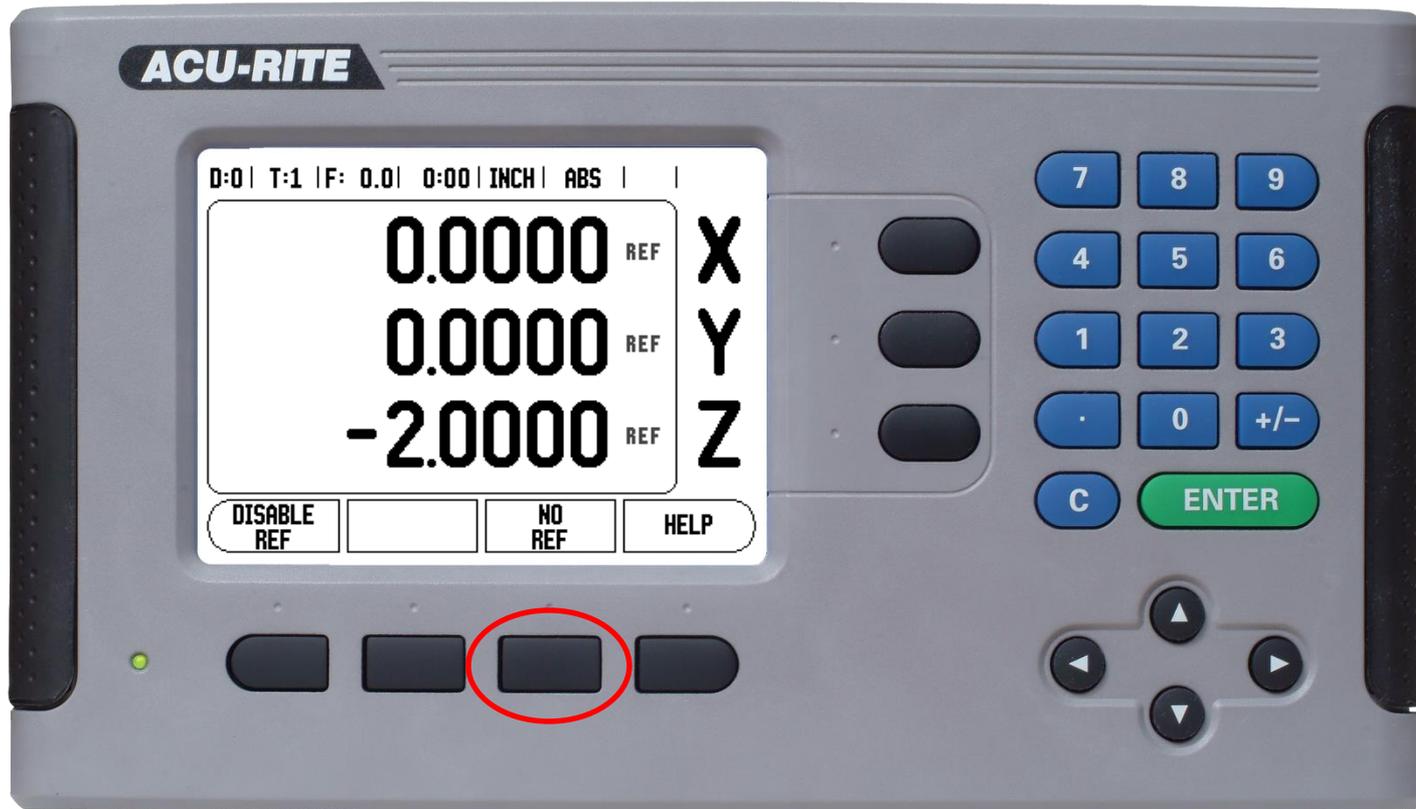


To change the resolution you don't need to reference the scale, so press the "NO REF" soft key.

ACU-RITE® 200S: *Changing Resolution Factor*

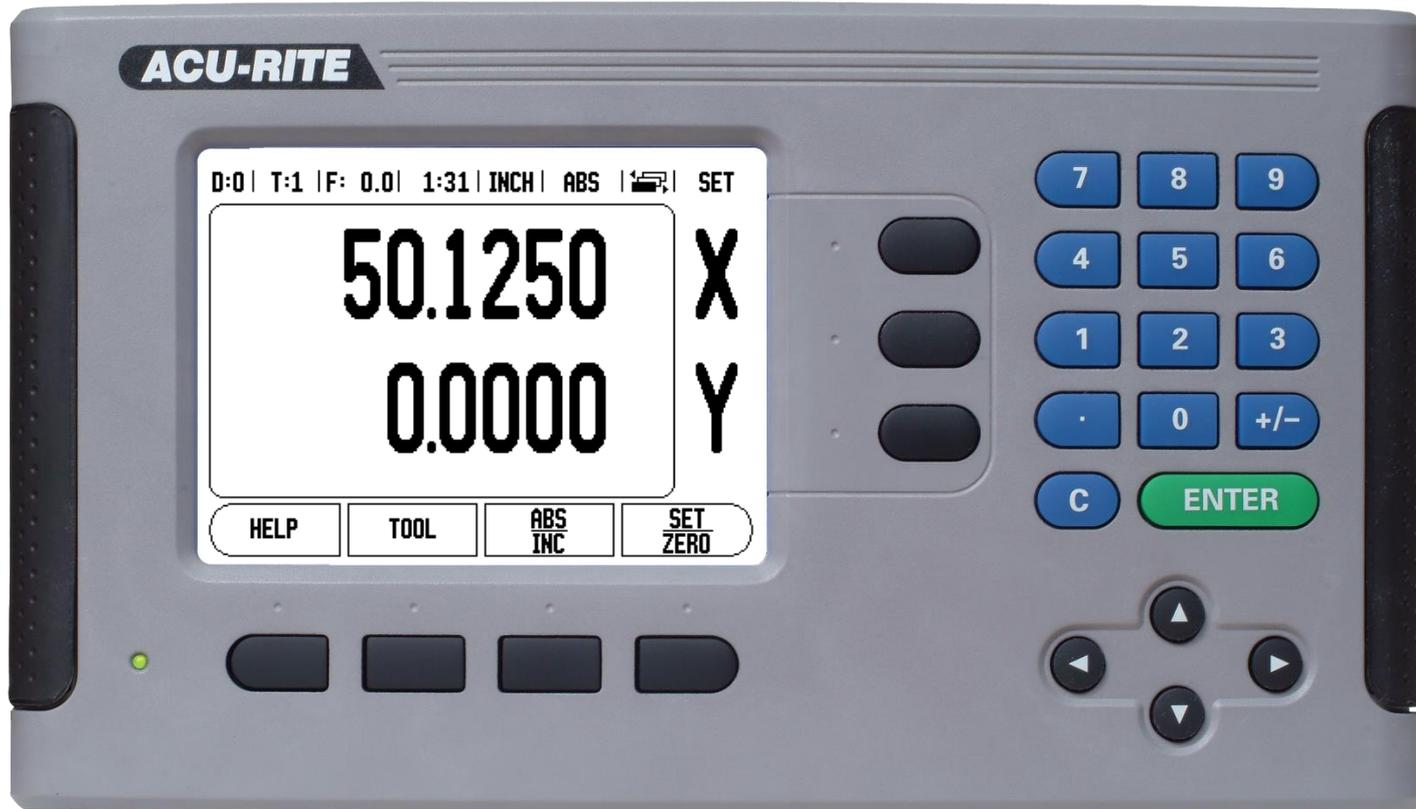

We moved our 10" scale its full length — but the DRO reads 50".


ACU-RITE® 200S: *Changing Resolution Factor*

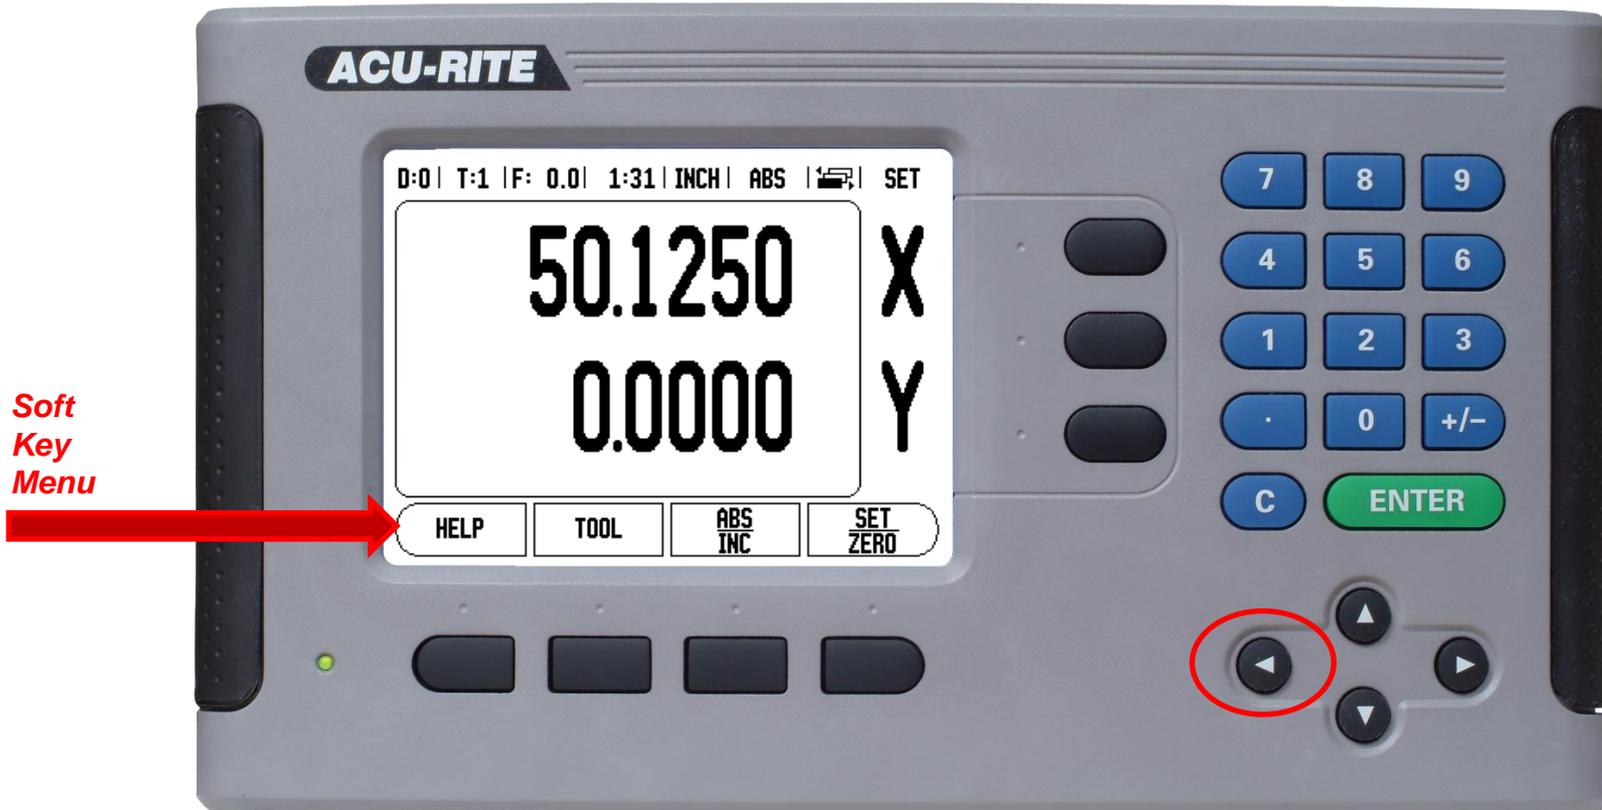

Soft
Key
Menu


Press the ◀ soft key until the first soft key menu space reads "SETUP."

ACU-RITE[®] 200S: *Changing Resolution Factor*

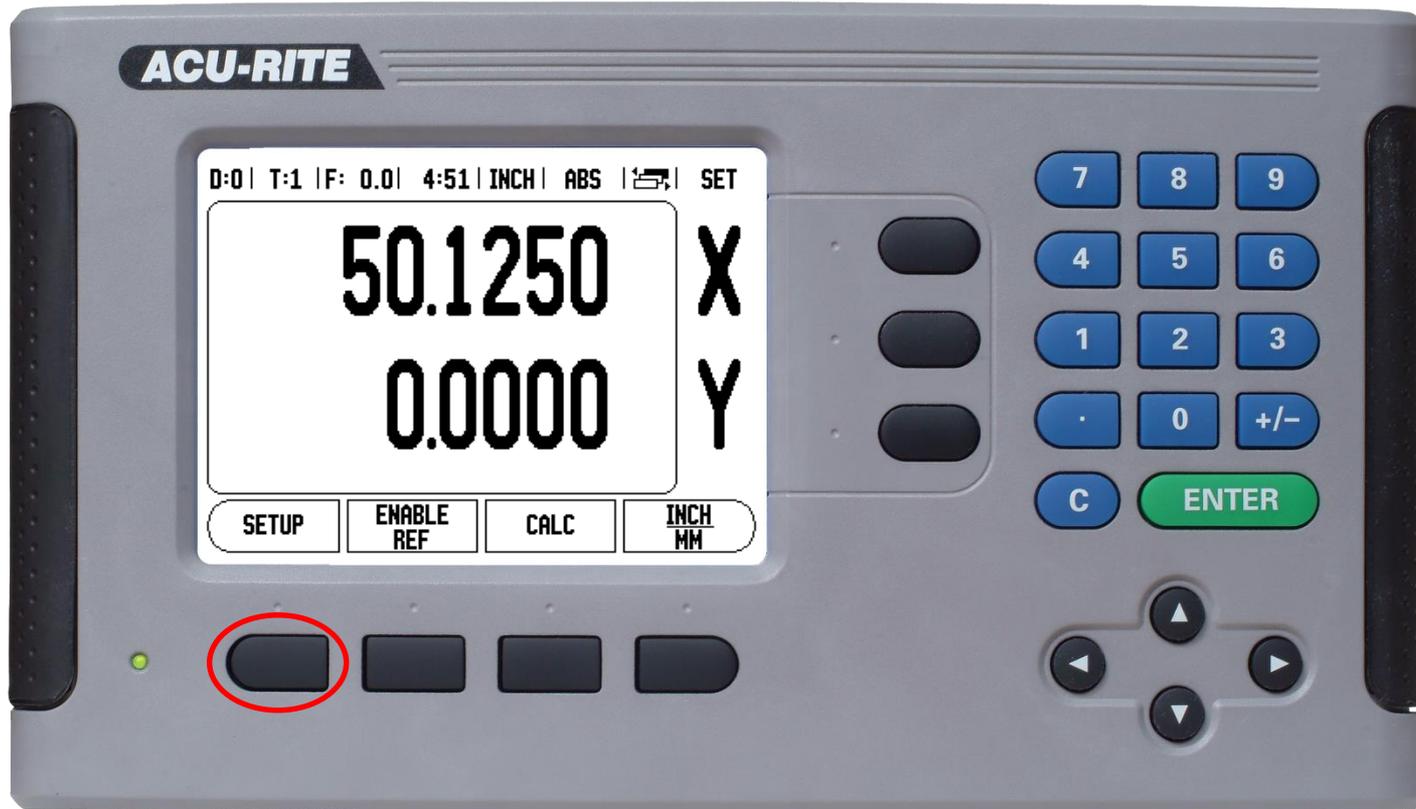


Press the “SETUP” soft key.

ACU-RITE® 200S: *Changing Resolution Factor*

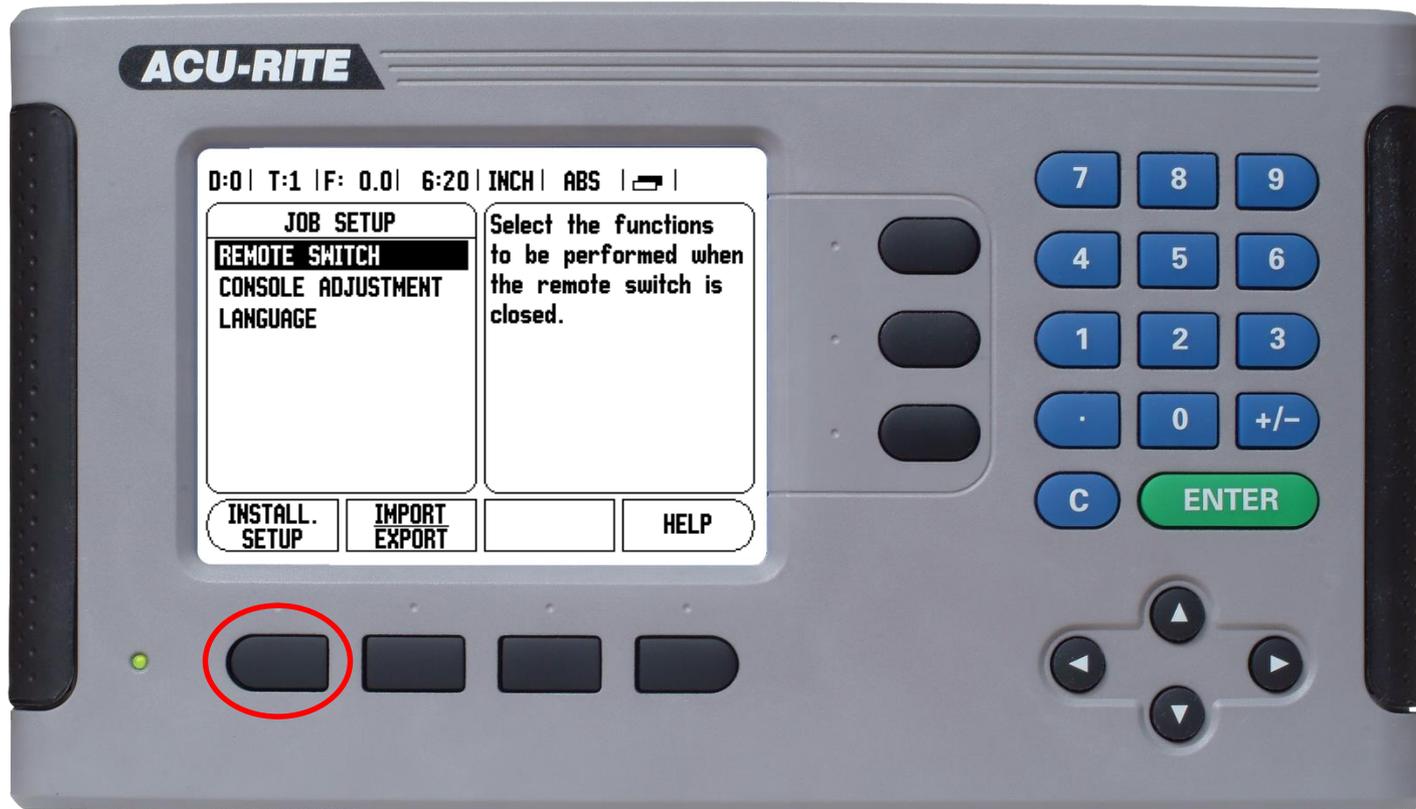

Press the "INSTALL SETUP" soft key.


ACU-RITE[®] 200S: *Changing Resolution Factor*

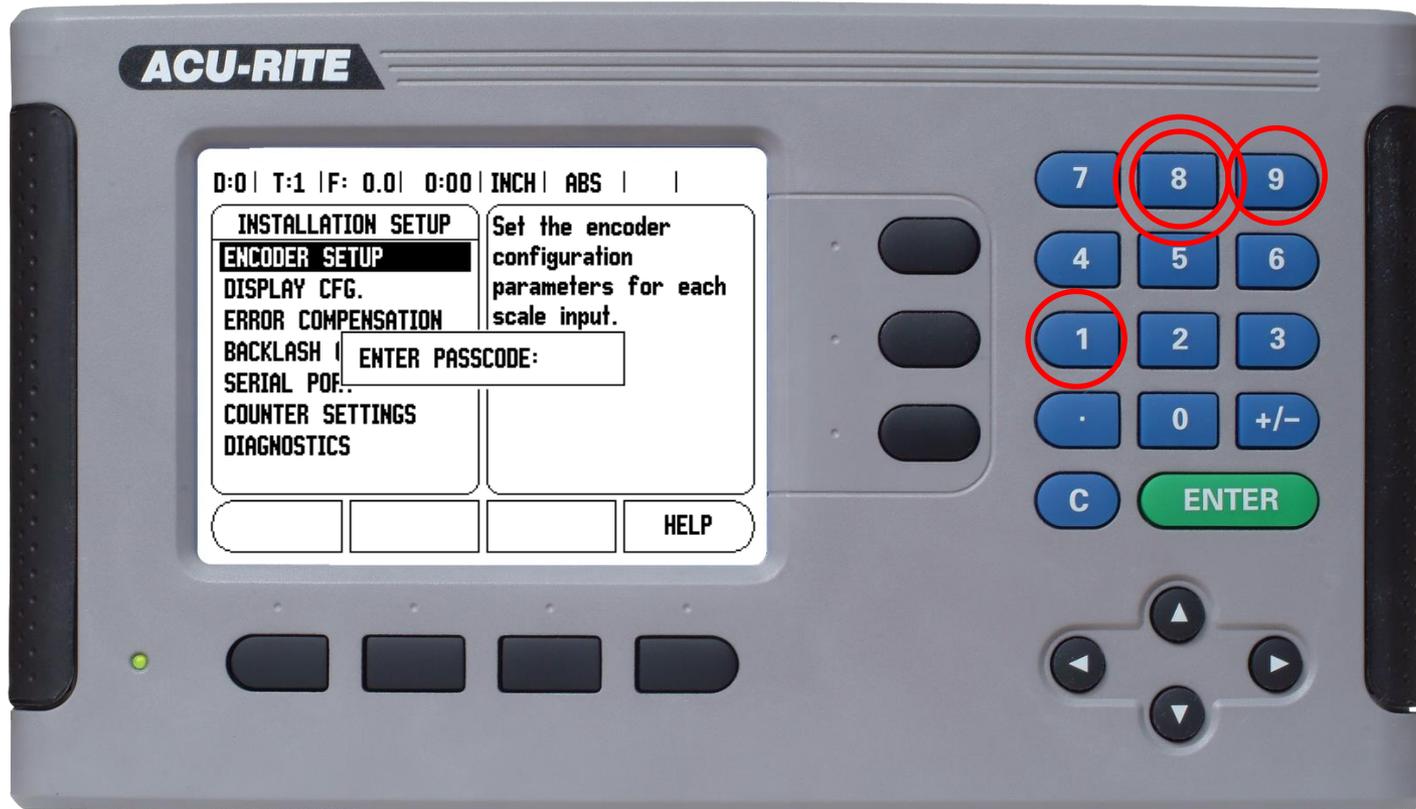

The DRO asks you for a “PASSCODE.”


Use the number soft keys and press: **8 8 9 1**

ACU-RITE[®] 200S: *Changing Resolution Factor*

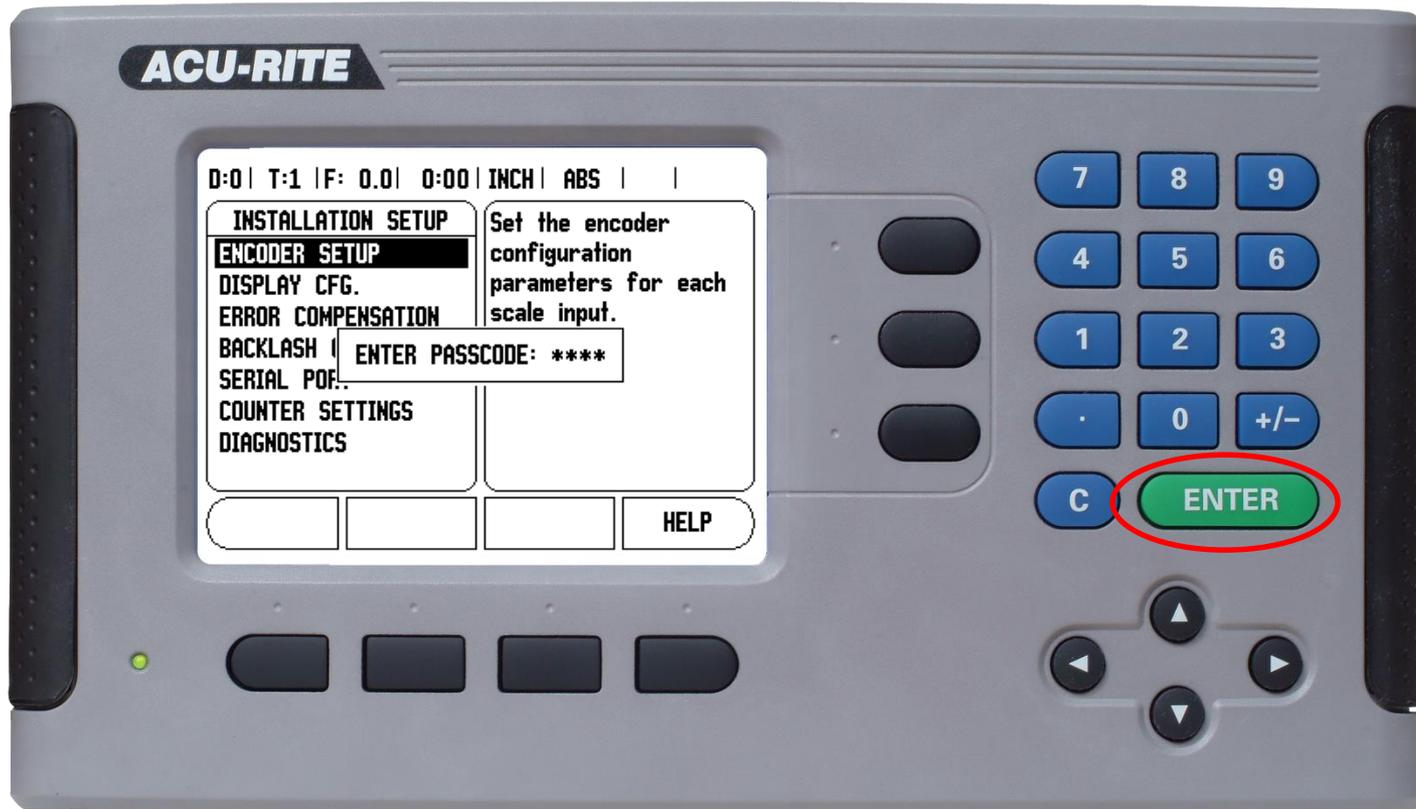


Press **ENTER**

ACU-RITE® 200S: Changing Resolution Factor

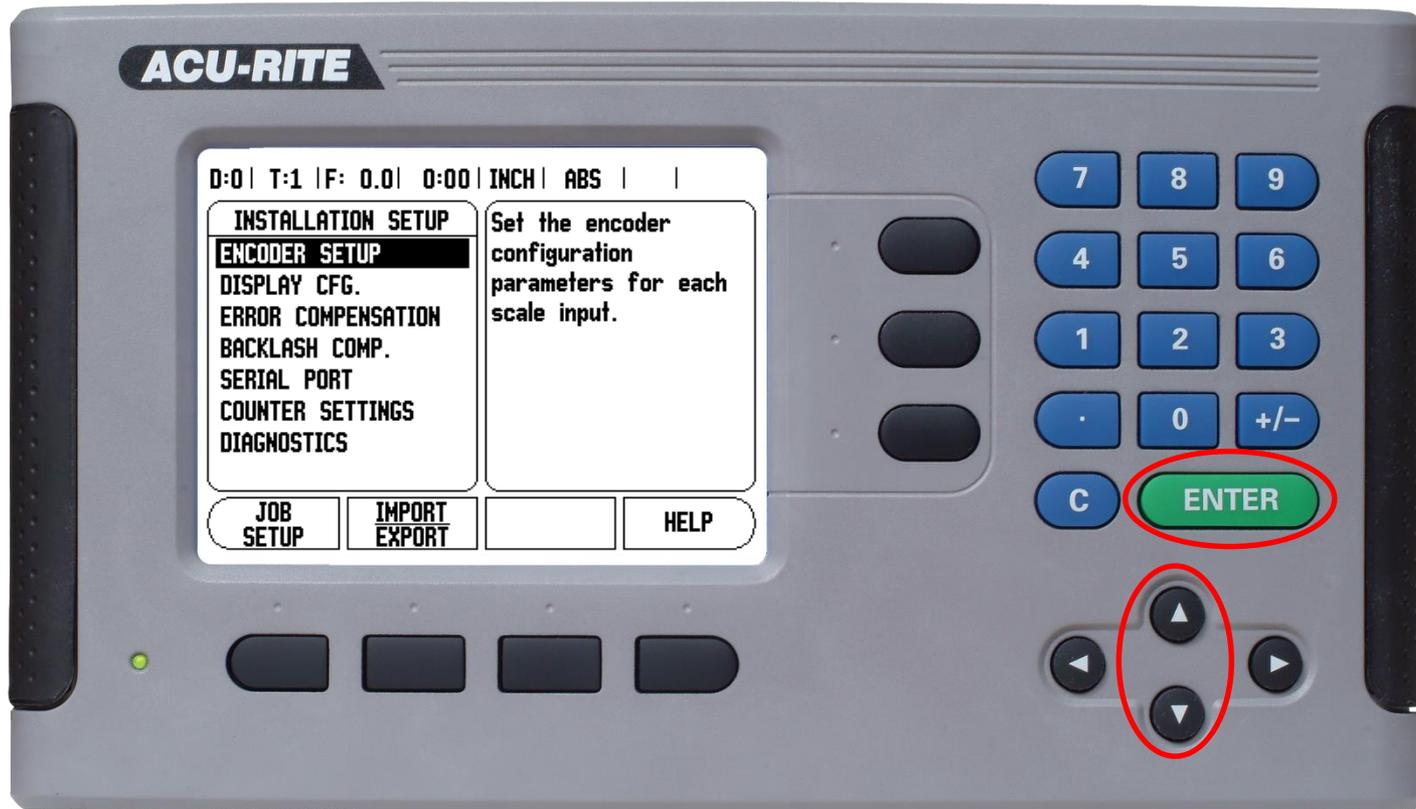

“ENCODER SETUP” should be highlighted. If it isn’t, use the ▲ or ▼ soft keys to highlight it. Then press **ENTER**


ACU-RITE[®] 200S: *Changing Resolution Factor*

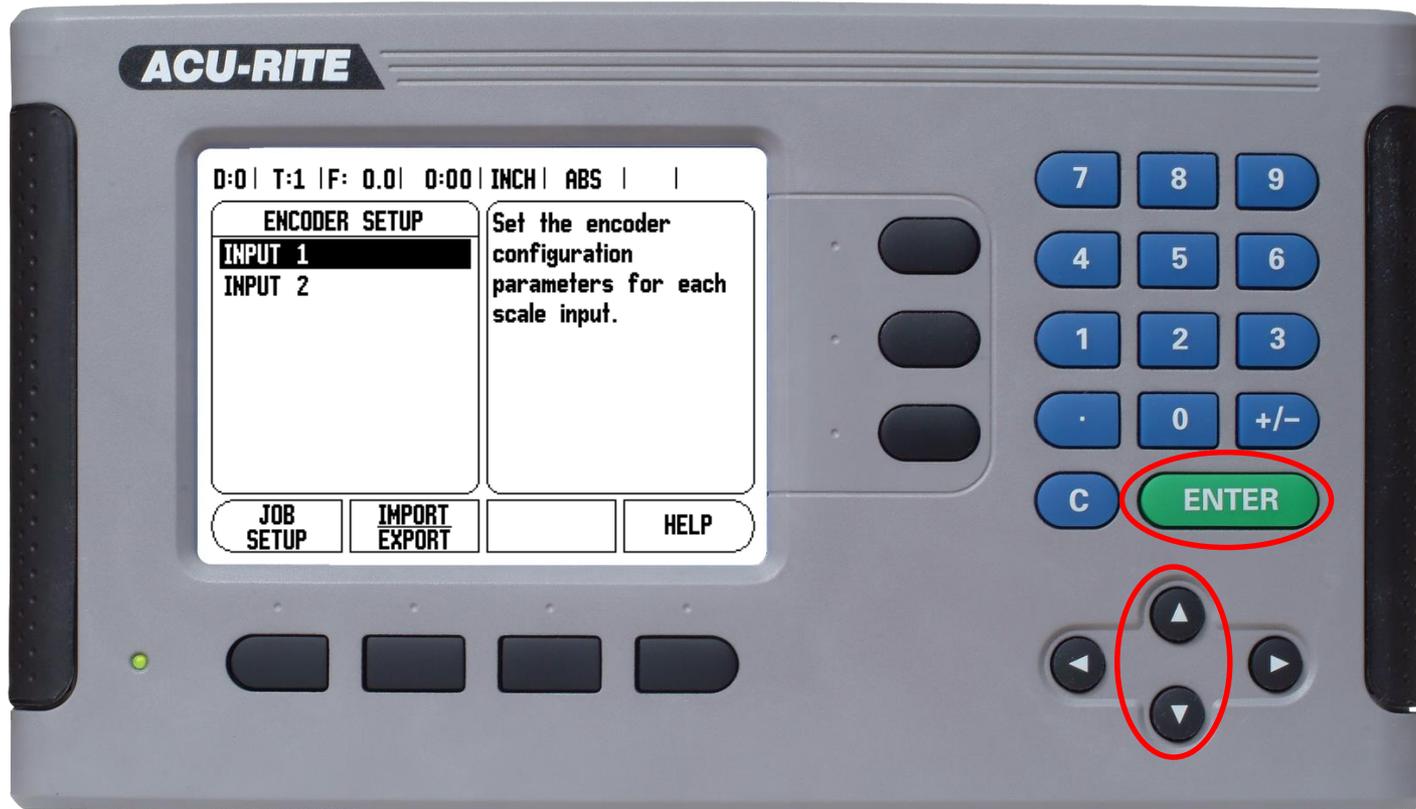

Use the ▲ or ▼ soft keys to highlight the input axis you want to change and then press **ENTER**


ACU-RITE[®] 200S: *Changing Resolution Factor*

This icon shows you how many pages there are in this function and which page you are on.

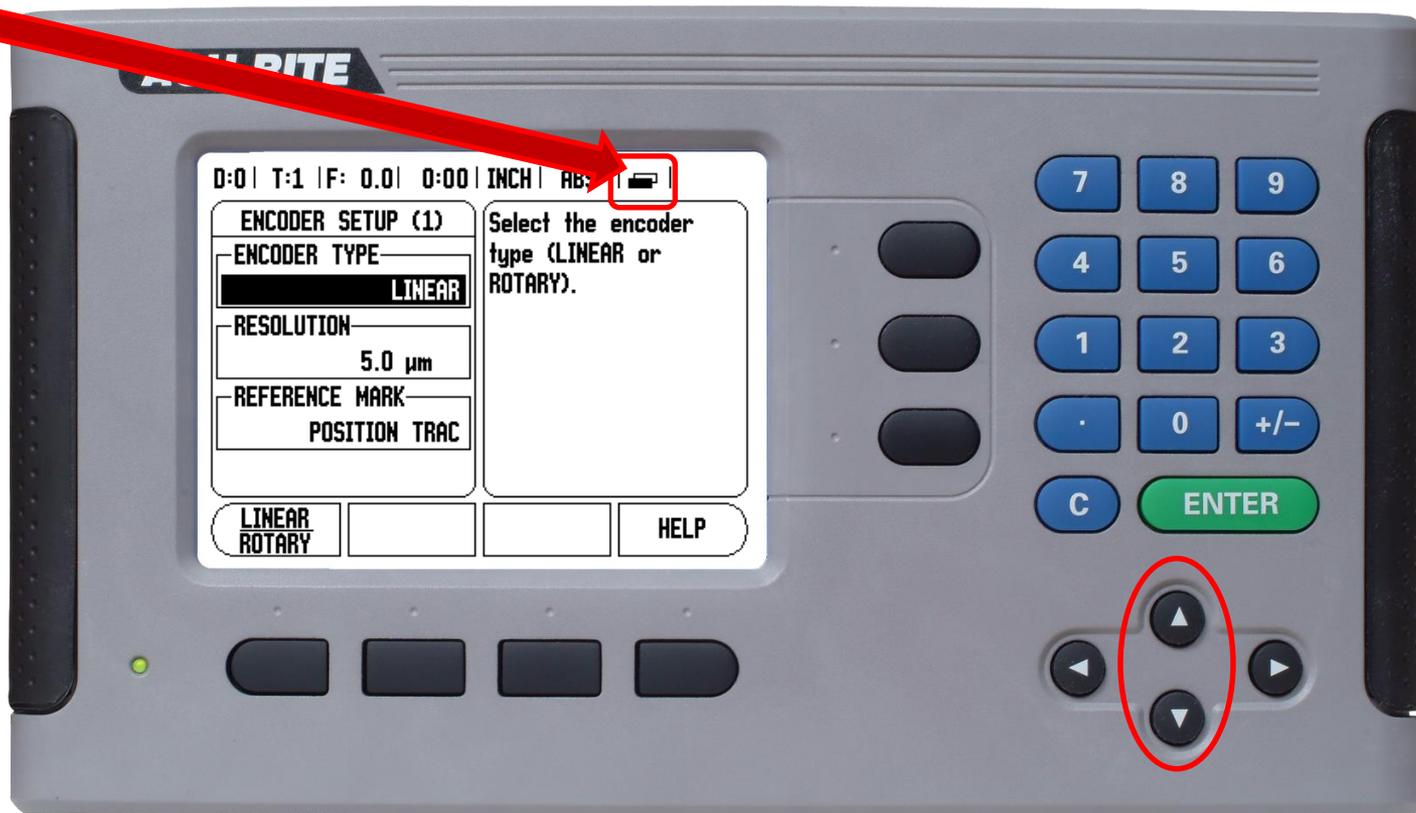


Use the ▲ or ▼ soft keys to highlight the “RESOLUTION” box.

ACU-RITE® 200S: Changing Resolution Factor

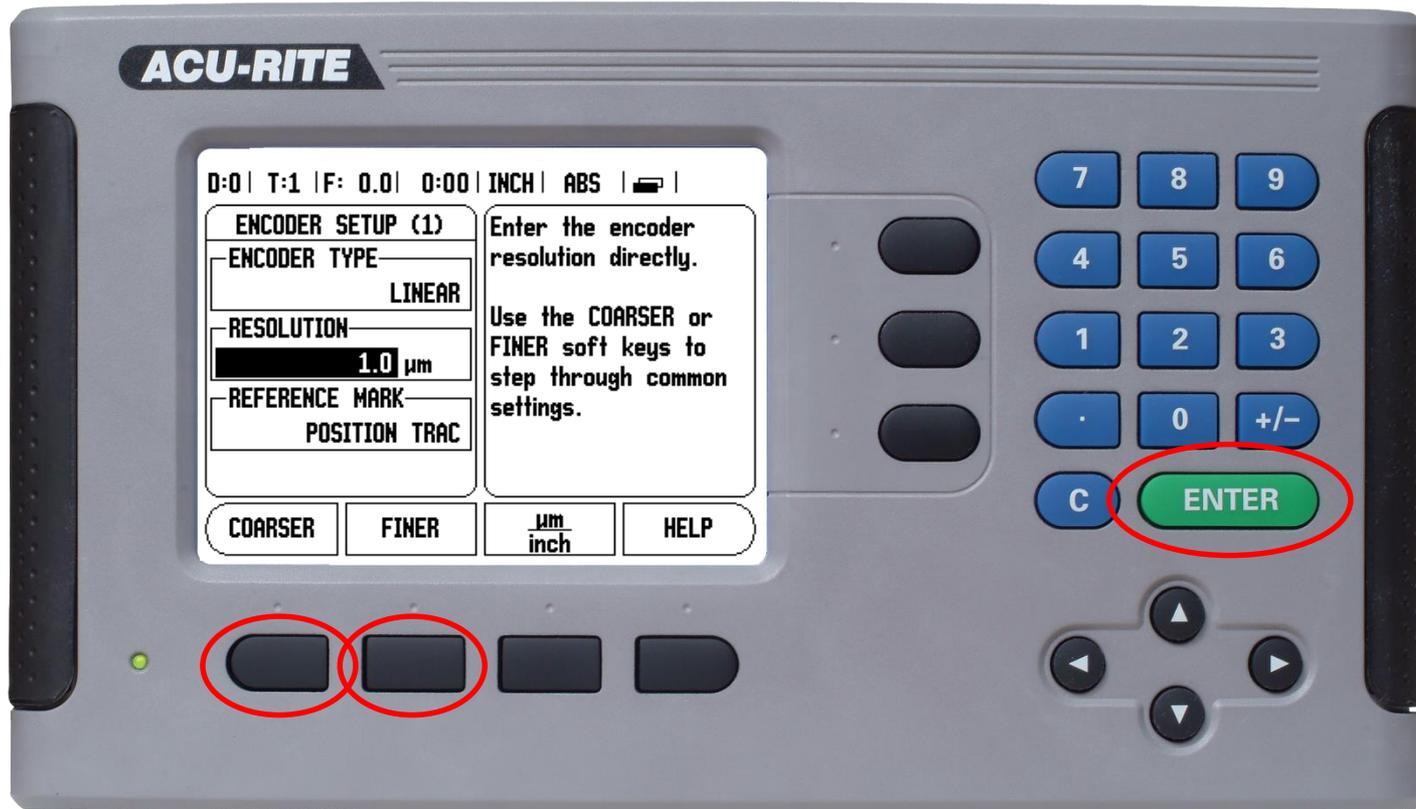


Use the “COARSER” and “FINER” soft keys to change the resolution factor until it matches what is printed on the encoder label. As you saw at the beginning, our scale is 1 μm . Press **ENTER** to save your selection.

ACU-RITE® 200S: *Changing Resolution Factor*

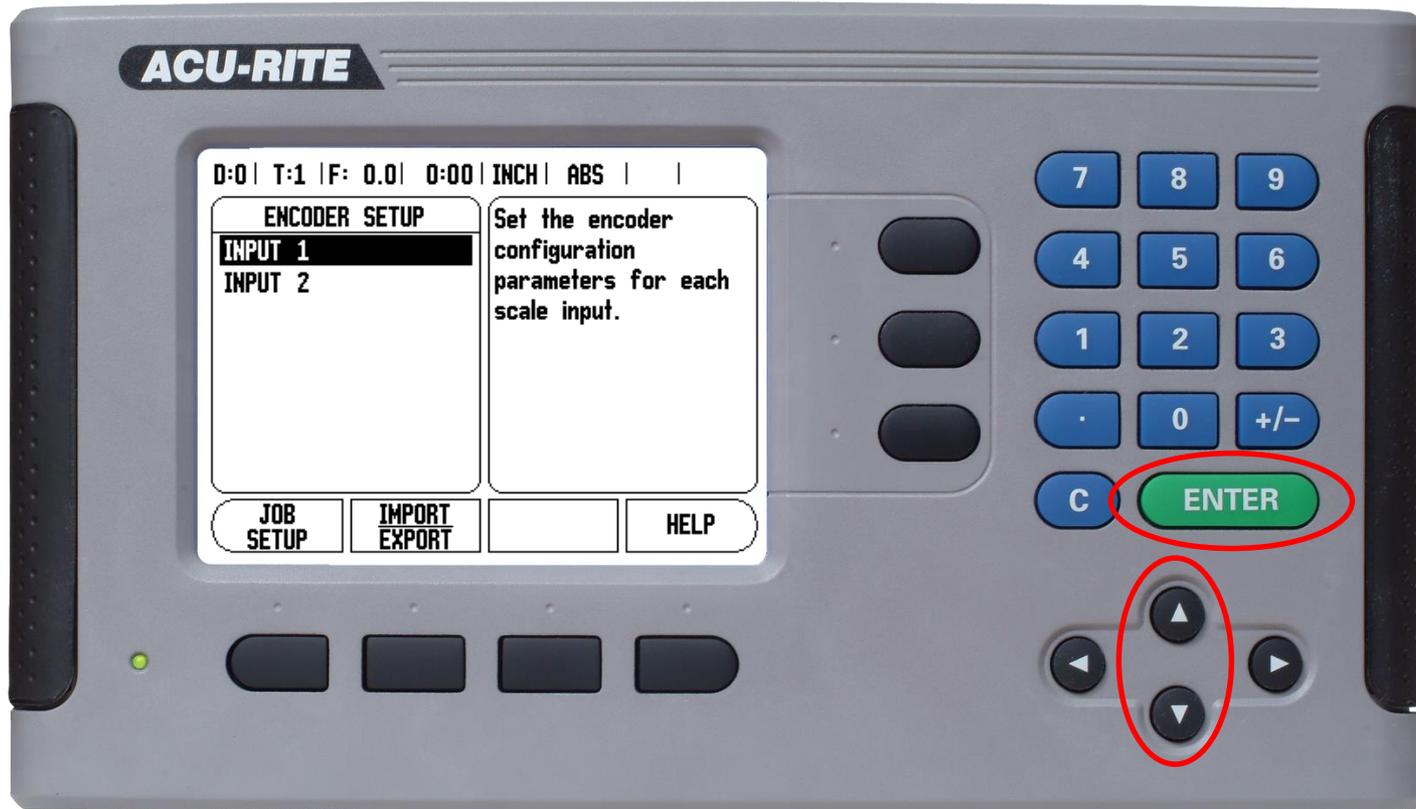


If you need to change more than one axis, highlight the other input axis. Repeat the procedure to change the resolution factor until it matches what is printed on each of the encoders labels. Press **ENTER** after each change to save them.

ACU-RITE[®] 200S: *Changing Resolution Factor*

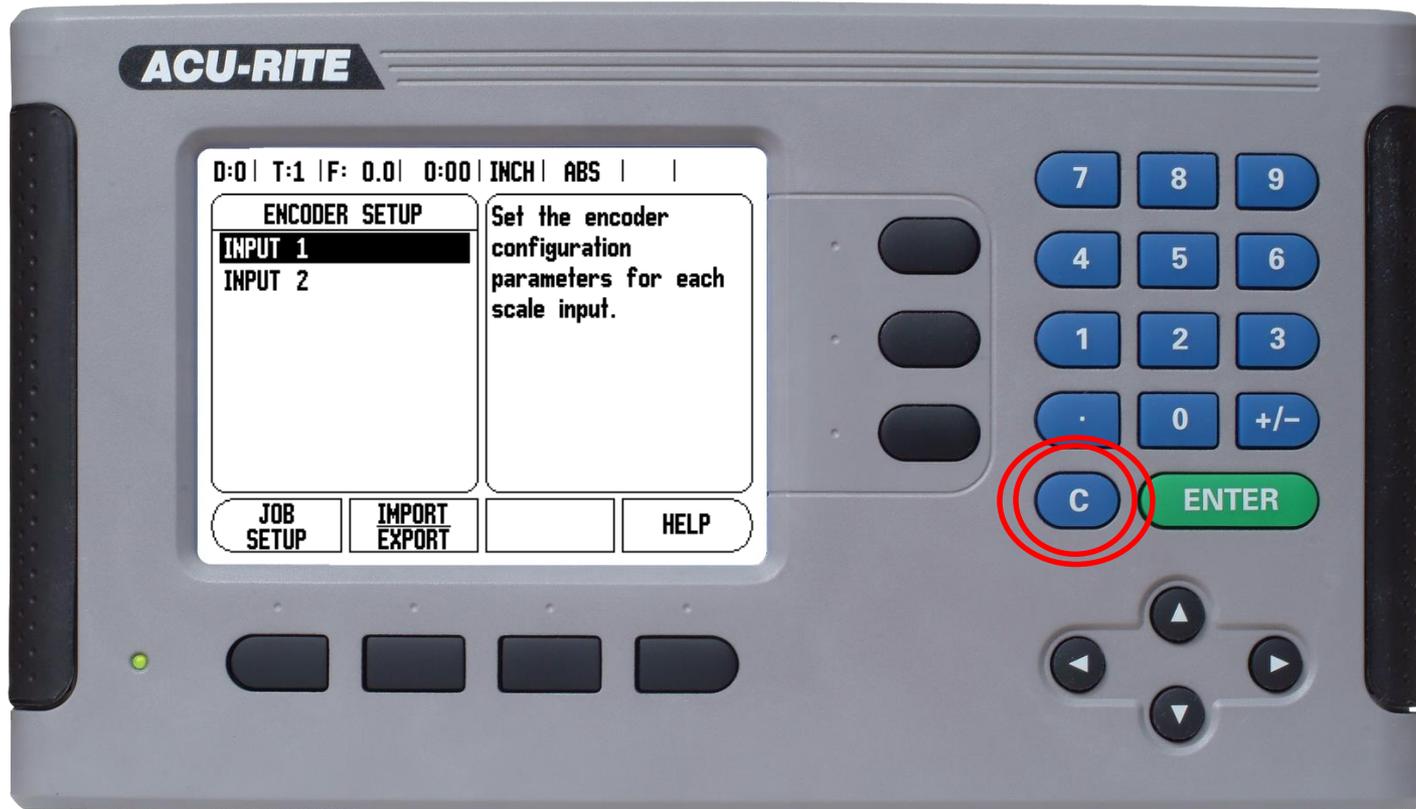

Press the **C** soft key as many times as needed to return to the home screen.

ACU-RITE® 200S: *Changing Resolution Factor*

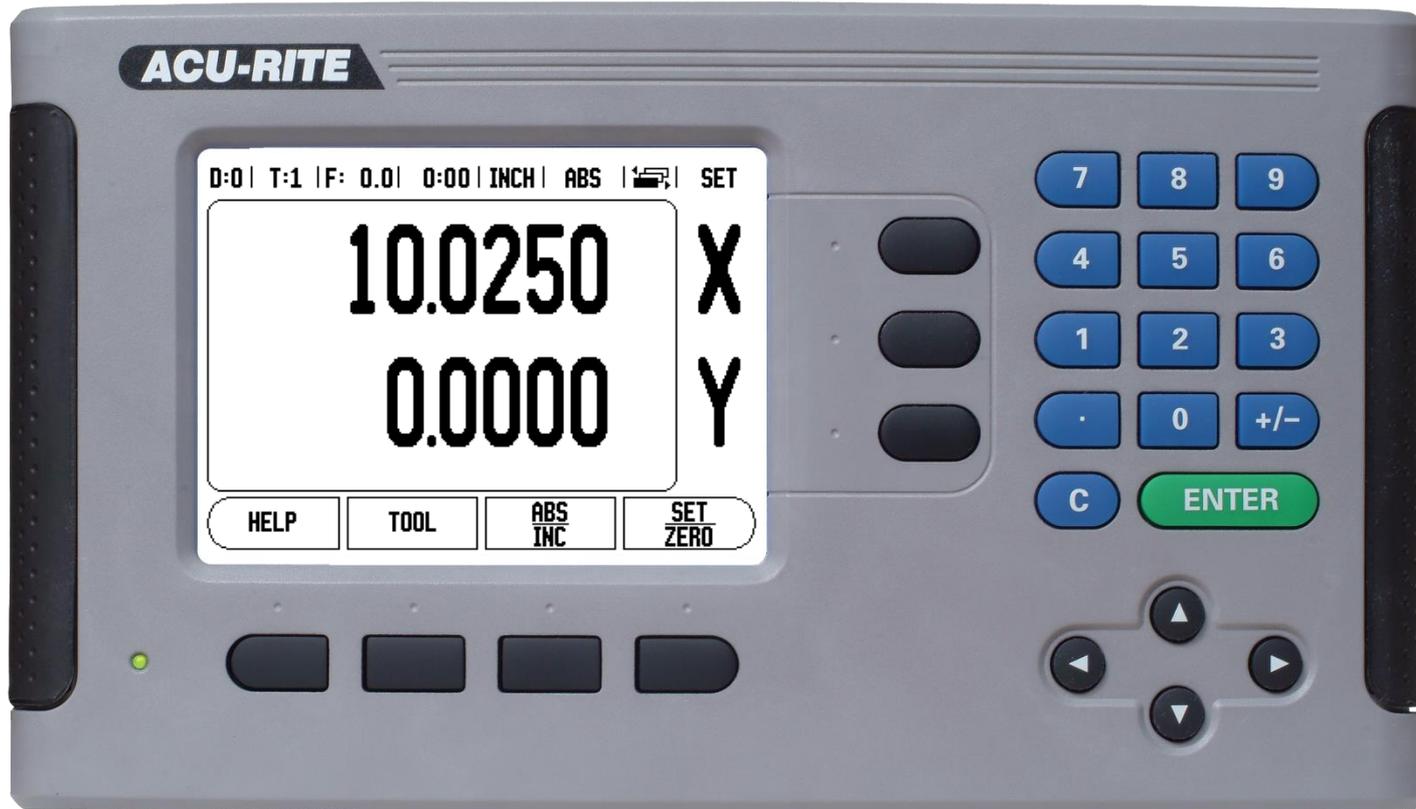

Your DRO should now display the correct resolution for each of your scales.